

Step by step installation of the Undertile DIY kit

⇒ Chisel the floor for cold tails



⇒ Close up view of chiselled floor



⇒ The floor should be clean and dust free



⇒ Measure and mark the floor as advised



⇒ Spray adhesive




⇒ Lay the wires across the floor



⇒ Secure the wire with tape



⇒ Attach cold tails to the draw wire

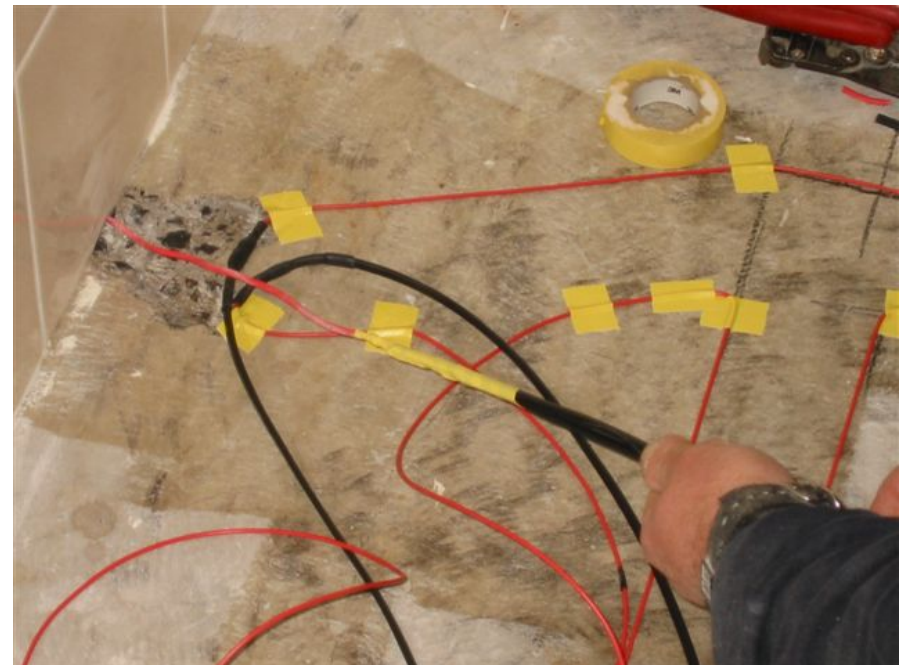


⇒ Ensure that the cold tails are recessed into the floor



⇒ Once the cold tails are pulled up through the wall, element integrity tests to be performed



⇒ Attach the element tester as instructed

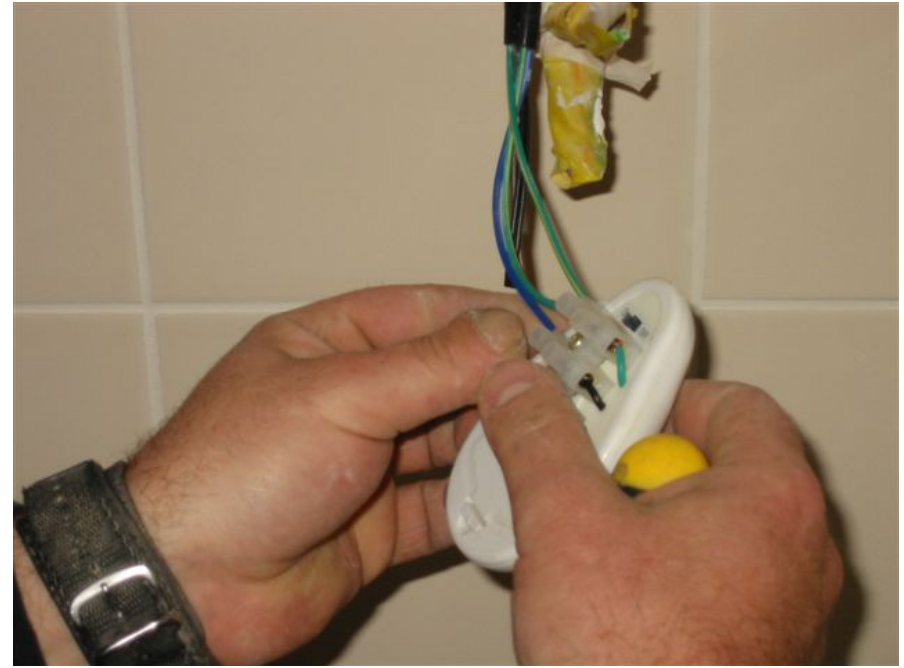

⇒ You can now apply floor screed if required

